

# DJ MIXER ROCKY PARTY SYSTEM

## DJ-3210

Caution: Read this before operating your unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place - away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. For proper ventilation, allow the following minimum clearances around this unit.  
Top: 10 cm (4 in) Rear: 10 cm (4 in) Sides: 10 cm (4 in)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:  
Other components, as they may cause damage and/or discoloration on the surface of this unit.  
Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.  
Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. We will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cable and outdoor antennas disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact Qualified service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the TROUBLESHOOTING section on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 19 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.

- 20 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. When you dispose of batteries, follow your regional regulations.
- 22 Excessive sound pressure from earphones and headphones can cause hearing loss.

## REAR PANEL

### 1. POWER

Three switches: AC , OFF, DC.

When switch to "AC", AC INPUT ON, the speaker is working and Battery can be charged. If in standby mode, the battery can be charged also.

When switch to "OFF", AC and DC Power off, the speaker can't work under this status. When switch to "DC", Battery ON/DC 12V ON mode, the speaker can work under the Battery supply, no need AC INPUT

### 2. DC 12V INPUT

When you take the speaker outside, Battery level is low or run out, after switch to "DC", you can connect your car s 12V battery to this DC 12V IN, so the speaker can work normally

### 3. FM ANTENNA

### 4. AC INPUT

AC 230V~, 50Hz

**1. LED DISPLAY**

Display System parameter information, a half of the left side display the INPUT A status, another half of left side display the INPUT B status

**2. VOLUME/MULTI**

Rotate the knob to adjust the main volume, phones volume, treble, bass. Short press this key to choose different music effect SCRATCH, REVERB, BEAT BOX, YEAH, BRING IT, GEYA, COME ON. Long press play DRUMS effect.

**3. PHONES MODE**

Press this key to choose different EARPHONES mode, INPUT A, INPUT B, INPUT AB

**4. INPUT B PREV**

Press this key to choose previous music with USB B

**5. INPUT B NEXT**

Press this key to choose next music with INPUT B

**6. INPUT B VOLUME**

This is used to adjust the volume with INPUT B

**7. INPUT B PAUSE**

Press this key to choose play/pause music with INPUT B

**8. INPUT B MODE**

Press this key to choose different INPUT B mode, LINE, USB B

**9. EARPHONES INPUT JACK**

**10. USB B input jack**

**11. GUITAR VOLUME**

Adjust the volume of the GUITAR input

**12. MIC VOLUME**

Adjust the volume of the MICROPHONE input

**13. ECHO**

Adjust the ECHO depth of the MIC input

**14. GUITAR jack**

**15. MIC jack**

**16. LINE-IN AUDIO INPUT JACK**

Connect to LINE IN signal input jack.

**17. CHARGING INDICATOR**

When the battery is low 9V, the red light

When charging, the green light

**18. AUX AUDIO INPUT JACK**

Connect to AUX signal input jack.

**19. USB A input jack**

**20. AC: CHARGE/STANDBY/NORMAL**

A long Press on this key turns on or standby the unit. A short Press on this key turns on the unit to CHARGE, STANDBY, NORMAL mode

**DC:BAT LEVEL**

A Press on this key shows the current battery level.

**21. INPUT A MODE**

Press this key to choose different INPUT A mode, AUX A, BT-A, FM, USB A

**22. INPUT A PAUSE**

Press this key to choose play/pause music with INPUT A

**23. INPUT A VOLUME**

This is used to adjust the volume with INPUT A

**24. INPUT A NEXT**

Press this key to choose next music with INPUT A

**25. INPUT A PREV**

Press this key to choose previous music with INPUT A

**26. MENU**

This switch selects the main volume, bass, treble, x driver, light mode

1  
.  
L  
I  
G  
H  
T

- 2. STANDBY
- 3. NUMBER BUTTON
- 4. TUNING-
- 5. CHANNEL-
- 6. VOLUME+
- 7. X DRIVE
- 8. TREBLE+
- 9. VOLUME-
- 10. TREBLE-

1  
1  
.  
A  
U  
X  
-  
A  
1  
2  
.  
U  
S  
B  
-  
A

- 13. USB-A F. WARD
- 14. USB-A B. WARD

.  
L  
I  
N  
E

1  
6

.  
U  
S  
B  
-  
B

17. USB-B F. WARD  
18. USB-B B. WARD

1  
9

.  
M  
U  
T  
E

20. FM

2  
1

.  
A  
U  
T  
O

22. TUNING+  
23. CHANNEL+  
24. BT  
25. DISCONNECT

2  
6

.  
B  
A  
S  
S  
+

2  
7

.  
B  
A  
S  
S  
-

28. INPUT-A REPEAT  
29. INPUT-A PAUSE  
30. INPUT-A PREVIOUS  
31. INPUT-A NEXT  
32. INPUT-B REPEAT  
33. INPUT-B PAUSE  
34. INPUT-B PREVIOUS  
35. INPUT-B NEXT

#### REMOTE CONTROL OPERATION:

If the remote control conflicts with other devices, the operation will be affected. Do not simultaneously press buttons on the unit and the remote control.

Avoid using two remote controls at the same time as this will cause a malfunction. Use only UM-4 ``AAA`` size batteries. Do not mix old batteries with new ones.

If the batteries leak, clean thoroughly before replacing with new ones.

Do not short two terminals of the batteries. Dispose of old batteries in a suitable place.

#### **NORMAL FUNCTION**

1. Be sure to switch off the power and to connect to corresponding input jacks.
2. Turn on the power and wait 3-4 seconds until the speaker functions are connected.
3. Select an audio source by pressing the INPUT A key on the front panel to display AUX A, BT-A, FM, USB A. Press the INPUT B key on the front panel to display LINE, USB B.
4. Adjust the VOLUME/MULTI knob on the front panel or the VOL+/- key on the remote control to adjust the setting of the main volume, treble, bass. Then turn the left push shot to adjust the volume of INPUT A, turn the right push shot to change the volume of the INPUT B.
5. Press the MENU key on the front panel to display BASS, TREBLE, XDRIVE, AUTO, MAIN then adjust the VOLUME knob to change music treble, bass, light mode and sound effect.
6. PHONES OUTPUT selection. Press the PHONES MODEL button on the front panel to display  
I N P U T A ,  
INPUT B, or  
INPUTAB.

PHONES VOLUME adjustment. Press the PHONES MODEL button on the front panel to display INPUT A or INPUT B or INPUT AB, then rotate the VOLUME/MULTI knob to adjust the PHONES VOLUME of INPUT A or INPUT B or INPUTAB

7. Press the LIGHT button on the remote control or press the MENU button on the front panel to display light mode, then press the VOLUME/MULTI knob to change the OFF, R, G, B, RG, RB, GB, RGB, AUTO, DEMO light mode.
8. Press the MUTE key to mute, press it again to reset.  
Press X DRIVE on the remote to turn on/off X-Bass effect.

#### **LIGHT COLOR CONTROL FUNCTION**

To control the light mode coming from the speaker panels by "Speaker" menu or "light model" button on remote control

- R = red lights flash
- G = green lights flash
- B = blue lights flash
- RG = red and green lights flash
- RB = red and blue lights flash
- GB = green and blue lights flash
- RGB = red, green, and blue lights flash
- Auto = the various color combinations cycle through and flash.
- Demo = lights flash and change color as if they were responding to the beat of the music.

## **TUNER APPLICATIONS**

1. Before using the radio functions, you must attach the supplied antenna.  
Adjust the antenna to obtain optimum reception.  
Press the INPUT A key on the front panel (amplifier) or the FM key on the remote control, to select FM function.
2. Press the CH+/CH- key on the remote control to find radio bands that you have previously saved.
3. Press or hold the TU+/TU- key on the remote control to adjust the radio frequency manually.
4. Press the AUTO key on the remote control, the machine will scan radio channels from low-frequency to high-frequency by itself and memorize the channels one by one.

## **OPERATING**

### **KARAOKE & GUITAR FUNCTION**

1. The machine can auto detect whether MIC or GUITAR is inserted.  
Please turn off the microphone volume and adjust the volume gradually after inserting the microphone.
  2. Press VOL+/- on the remote or adjust the MIC.VOL knob on the front panel to change the microphone VOLUME.
  3. Adjust the ECHO knob on the front panel to change the microphone ECHO.
  4. Adjust the GUITAR.VOL knob on the front panel to change the guitar VOLUME.
- Note: Do not touch the top of the microphone when singing in order to avoid howling effect.  
Adjust the microphone volume gradually to avoid howling effect.

### **BLUETOOTH PAIR AND CONNECT**

- Turn off any Bluetooth devices previously paired (linked) with this unit.
- Turn on the Bluetooth features on your phone or music player.
- Turn on and set this unit to Bluetooth mode. The flashing blue light BT on LED display indicates it is in pairing mode.
- Set your phone or music player to search for Bluetooth devices.
- Select AKAI DJ-3210 from search results on your phone or music player.
- Select OK or YES to pair this unit with your phone or music player.

- If protected, enter 0000 for passkey steady blue light indicates successful connection.
- Press the DISCONNECT key on the remote to disconnect the Bluetooth.

#### FUNCTION OF USB READER

This unit has two USB jacks. Press the INPUT A key to select USB A, then you can insert a USB to play music. Press the INPUT B key to select USB B, then you can insert the another USB to play music.

Important: The USB port is intended only for data transfer only; other devices cannot be used with this USB connection. The use of USB extension cords is not recommended.

#### IN ORDER TO PROTECT THE BATTERY

1. When the battery is powered mode, standby operation is invalid.
2. When the battery is low, the system prompts "LOW POWER", POWER lamp blinks.
3. When the battery is serious shortage, the system prompts "NO POWER",

POWER lamp

blinks.

After 1 minutes, the system to stop.

And the control panel has a red lamp, when the battery is enough, the lamp is normally turn on.

When the low battery, the red lamp blinks.

#### BATTERY DISASSEMBLY

1. Remove the screws on the rear panel.
2. Take out the battery.
3. Disconnect

1

2

3

### **ACCESSORIES**

Remote control

----- 1 pc

Instruction Manual

----- 1 pc

Wireless  
microphone-----

-----1 pc

### **SPECIFICATION**



Frequency Response :

BASS-----  
-----20Hz-3KHz  
TREBLE-----  
--3KHz-20KHz Power  
Source-----2  
30V~,50Hz Power Consumption  
-----120W

## **DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT**

This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw garbage at the end of its life, but take it to a collection center for recycling. In this way you will help to protect the environment and be able to prevent any negative consequences that it would have on the environment and human health.

To find your nearest collection center:

-Contact local authorities

- Access the website: [www.mmediu.ro](http://www.mmediu.ro)

Request additional information from the store where you purchased the product.